

**SEABOB**

English



# **SEABOB Cam**

User Manual SEABOB Cam

## Components

### 1. Front Cam (integrated)



### 2. Selfie Cam (integrated)



Before using the SEABOB Cam thoroughly read the following safety information and the instructions contained in the detailed SEABOB User Manual provided by the manufacturer CAYAGO AG.

## 1. Introduction

Congratulations on your new SEABOB with an integrated Camera! With the SEABOB Cam, you can capture your experiences over or underwater and share it with others as you wish. When recording, you are able to switch between Front and Selfie Cam with only one single button. In the recording mode, the SEABOB display screen keeps you informed about the current diving depth, the duration of recording and the SEABOB's battery charge level.

### Technical specifications

Full HD (Front and Selfie Cam), internal memory (fixed): 64 GB



Wireless Interface: WiFi, Mobile App for video download  
Mobile App OS Versions (iOS >= 9.0 / Android >= 4.4)



**Selfie Cam**

1080p / 30 fps

**Front Cam**

1080p / 30 fps

## 2. Safety Information

⚠ Ensure that all safety information contained in the detailed SEABOB User Manual is observed, especially the safety information for diving to a depth of more than 2.5 m (Chapter 1.4) and the regulations for diving (chapter 5.6 and 5.7).

⚠ Before using the SEABOB, it is mandatory to read and understand this user manual as well as the detailed SEABOB User Manual. Please keep these manuals safe during the entire operational lifespan of your SEABOB. It is necessary to carefully read and understand these manuals. If you do not observe the information contained in these manuals, it may result in serious injury or death.

⚠ Ensure that you have completely understood all functions and properties of the SEABOB and the Cam, before each and every use. In case of doubt, please contact the manufacturer or your SEABOB specialist dealer.

⚠ The SEABOB Cam may only be used for the purpose described in this manual.

⚠ Exercise caution when using the Cam. Always be aware of your surroundings to avoid hurting yourself or others. Always keep a reasonable distance from people and objects in the vicinity! The display screen when recording is not suitable as a lens to view your surroundings. Particularly when recording, keep an eye on the immediate area!

⚠ When using the Cam, comply with all local rules. That also applies for all data protection laws, which may restrict the production of images in certain areas. Please respect privacy! In particular, do not film other persons without their consent.

⚠ The SEABOB Cam and its components may not be modified in any way.

**⚠** Do not damage, open, compress, bend, deform, pierce, shred, heat up, light up or paint the Cam. Do not insert foreign objects into the Cam. Do not use the Cam if it is damaged, caused e. g. by breakages, punctures or water damage.

**⚠** Use of the SEABOB App for video download etc. is only allowed when the SEABOB is stationary, it is not allowed in the driving mode.

### 3. Using the SEABOB Cam

In addition to the following information, please pay attention to the quick guide on the reverse side.

#### 1. Switch on the SEABOB



→ push the SEABOB's blue button

Prompt "SEABOB push Trigger" appears.



→ confirm with Trigger

"SEABOB please wait" appears on the display. After a short wait, the driving screen appears.

#### 2. Start recording (Front Cam)



→ push the SEABOB's silver button

**Note:** The Cam can only be started from the main menu. The Power Level has to be at least 1 and the storage capacity should be at least 2 GB. If there is not enough storage capacity, a warning message appears on the SEABOB Display: "Not enough memory, please delete files".

#### 3. Change between Front and Selfie Cam



→ push the SEABOB's silver button

**Note:** By changing between Front and Selfie Cam (and vice versa) a new video is started.

#### 4. Stop Cam



→ push the SEABOB's blue button

#### 5. Download the SEABOB App

To download, delete or display your videos stored on the SEABOB, please download the "SEABOB" App from the App Store (Apple Store or Google Play Store) and open the App on your mobile device.

#### 6. Connect SEABOB with mobile device

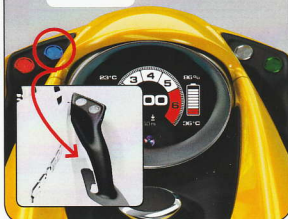
Please activate "WiFi" on your mobile device. In the SEABOB App, go to "Connect SEABOB" and follow the instructions. Via the App, you can display, delete or download your stored videos, amongst other functions.

**Note:** Video download is only possible when the SEABOB is connected to a mobile device via WiFi. The SEABOB has to be at Power Level 0 or connected to an activated charger.

**Note:** The SEABOB does not provide its own Internet connection.

**For service or repairs please contact the manufacturer or your SEABOB specialist dealer.**

1

Switch on  
SEABOB

2

Start  
Front Cam

3

Change  
between Front  
/ Selfie Cam

4

Stop  
Cam

5



6

